



Owner's Manual For The
Escort
On-Wall Loudspeakers



CONTENTS	2
INTRODUCTION.....	3
WARRANTY.....	4
DESCRIPTION.....	5
CONNECTIONS.....	6
INSTALLATION.....	7
SPECIFICATIONS.....	8

Congratulations on your purchase of your Legacy Audio Escort On-Wall Loudspeaker system and thank you for choosing Legacy. Please take a few minutes to read these instructions thoroughly to make the installation easier and insure optimum performance.

LIMITED THREE-YEAR WARRANTY

Legacy Audio extends to the original owner coverage of defects in materials and workmanship for a period of 90 Days from date of purchase. Your warranty may be extended to three years upon the completed warranty card being received at our facility.

This warranty does not include a) damage in shipment, b) damage caused by accidental or intentional misuse or abuse, c) units not registered with Legacy Audio, d) damage resulting from unauthorized modifications or repairs. Liability is limited to the repair or replacement, at our option, of any defective component and shall not include damage due to short circuits, property and/or consequential damages which may result from the failure of this product.

If this product should ever require servicing, simply call 1-800-283-4644 for immediate assistance.

CUSTOMER RECORD	
MODEL NO.	_____
SERIAL NO.	_____
DATE OF PURCHASE	___ / ___ / ___
OWNER	_____
STREET ADDRESS	_____ _____
CITY	_____
STATE	_____
ZIP	_____

Escort is simply the most versatile speaker you'll find. At home indoors and out, Escort may be wall-mounted, pole-mounted, soffit-mounted or even concealed behind the leaves of potted plants. Take Escort poolside or place on a bookshelf.

Since Escort's 5.25" woofer and dome tweeter are magnetically shielded, it can be used to upgrade your computer speakers or as a killer center channel for your home theater.

Before you purchase loudspeaker wire, check local building codes to make sure that the wire is rated to comply with applicable local safety codes such as UL or CL-2. Use only stranded wire no thinner than AWG 16. For runs longer than 100 feet, we recommend minimum of AWG 14. When pulling wire, take care not to pull the wire too fast to prevent stretching the wire or scorching the insulation from friction. Leave 2 to 3 feet of excess loudspeaker wire at both ends; it is easier to trim off excess wire than to splice additional wire. When securing the wire inside the walls, be careful not to pierce the insulation with nails or staples.

Installing the Escort On-Wall Loudspeakers

1. Find a stud in your wall or a solid mounting surface where you would like the escort to be mounted. It is best to mount the brackets to a stud in your wall, otherwise the weight and vibrations from the speaker could cause it to become unattached from the wall.
2. Fasten the supplied mounting bracket to the wall with screws.
3. Connect your speaker wire to the Escort connection plate.
4. Place Escort in the mounting bracket and fasten with the black connectors.
5. Adjust the speaker to the direction of your desired listening location and enjoy.

System Type:	2 driver, 2 way
Tweeter:	dome
Midwoofer:	5.25 “
Low Frequency Alignment:	Sealed Enclosure
Frequency Response:	80Hz – 22khz
Impedance:	6 Ohms
Sensitivity:	90 dB
Recommended Amplification:	15-150 Watts
Crossover Frequency:	3k
Dimensions (H x W x D):	9.5”x 7.25”x 6.5”
Weight:	8 pounds